




READY2GO

ASSEMBLY INSTRUCTIONS
FULL FRONT Reception Desk
R2O-DFF187

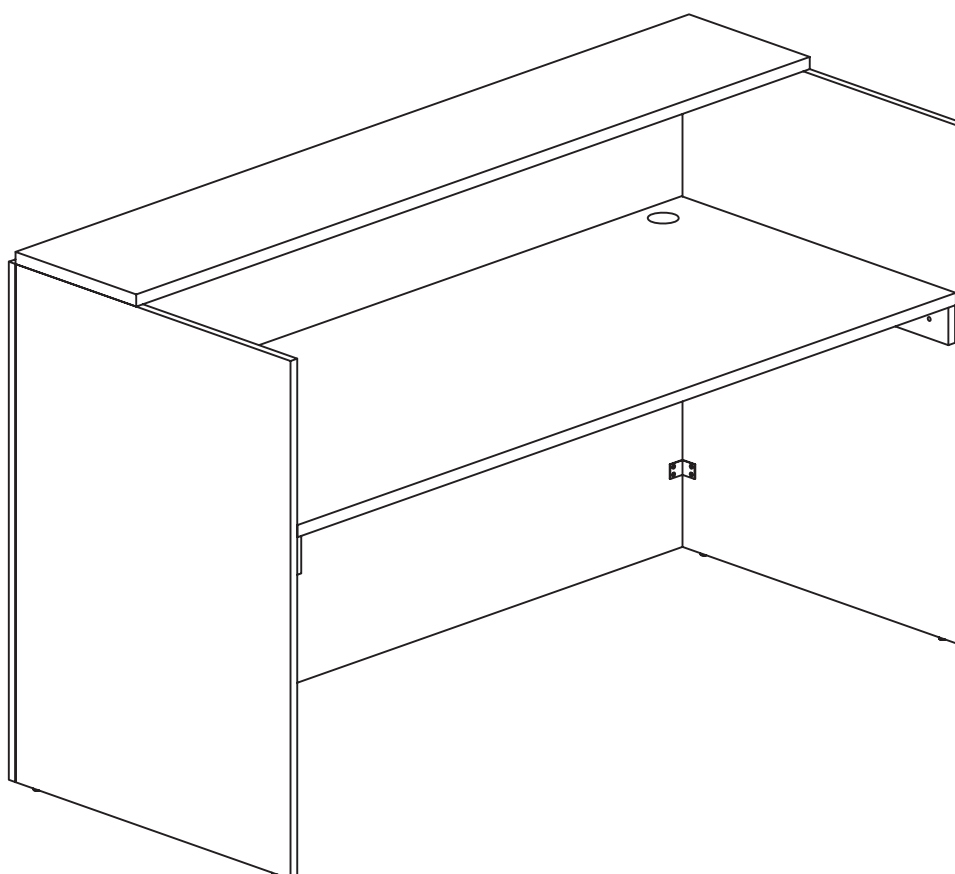

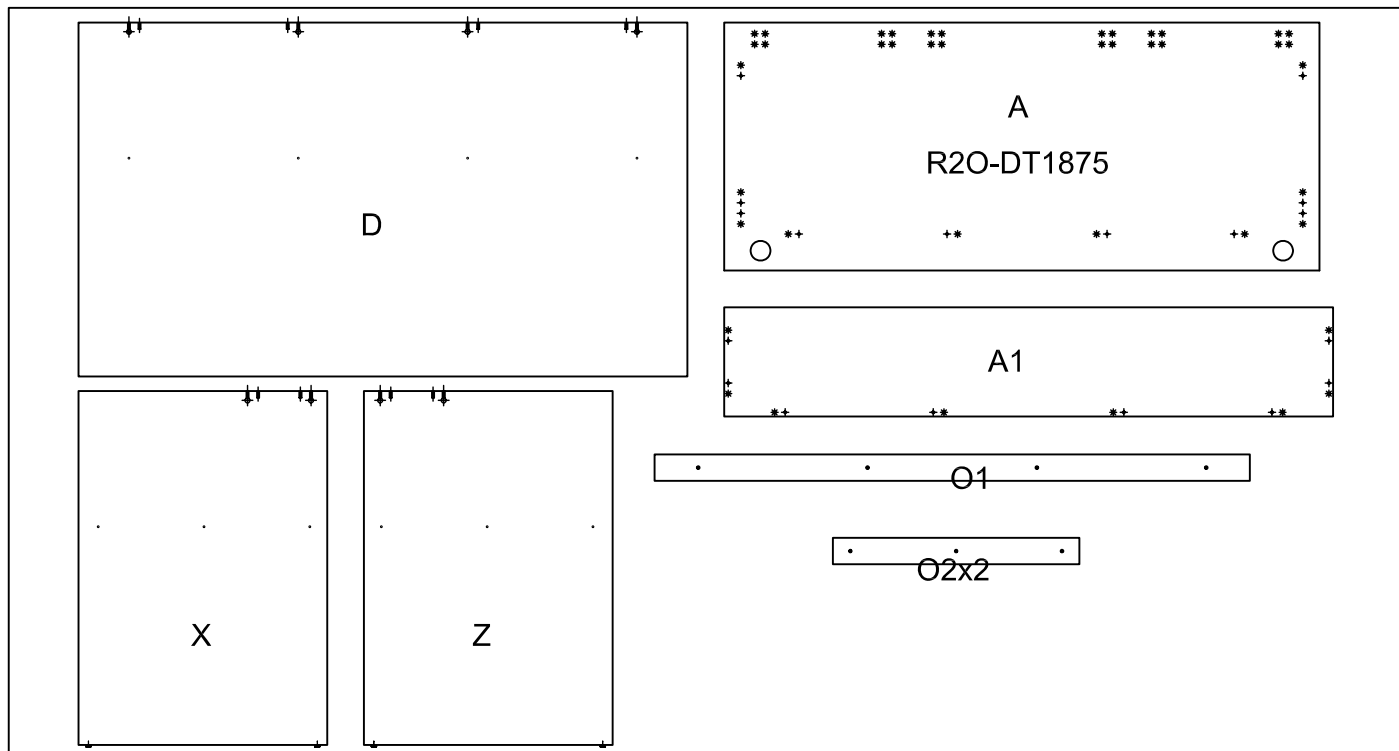


pin  ① 8PCS	Dowel  ② 8PCS	Cam Cover  ③ 8PCS	Screw  ④ 40PCS	Screw  ⑤ 10PCS	Bracket  ⑥ 10PCS
--	--	--	---	---	---

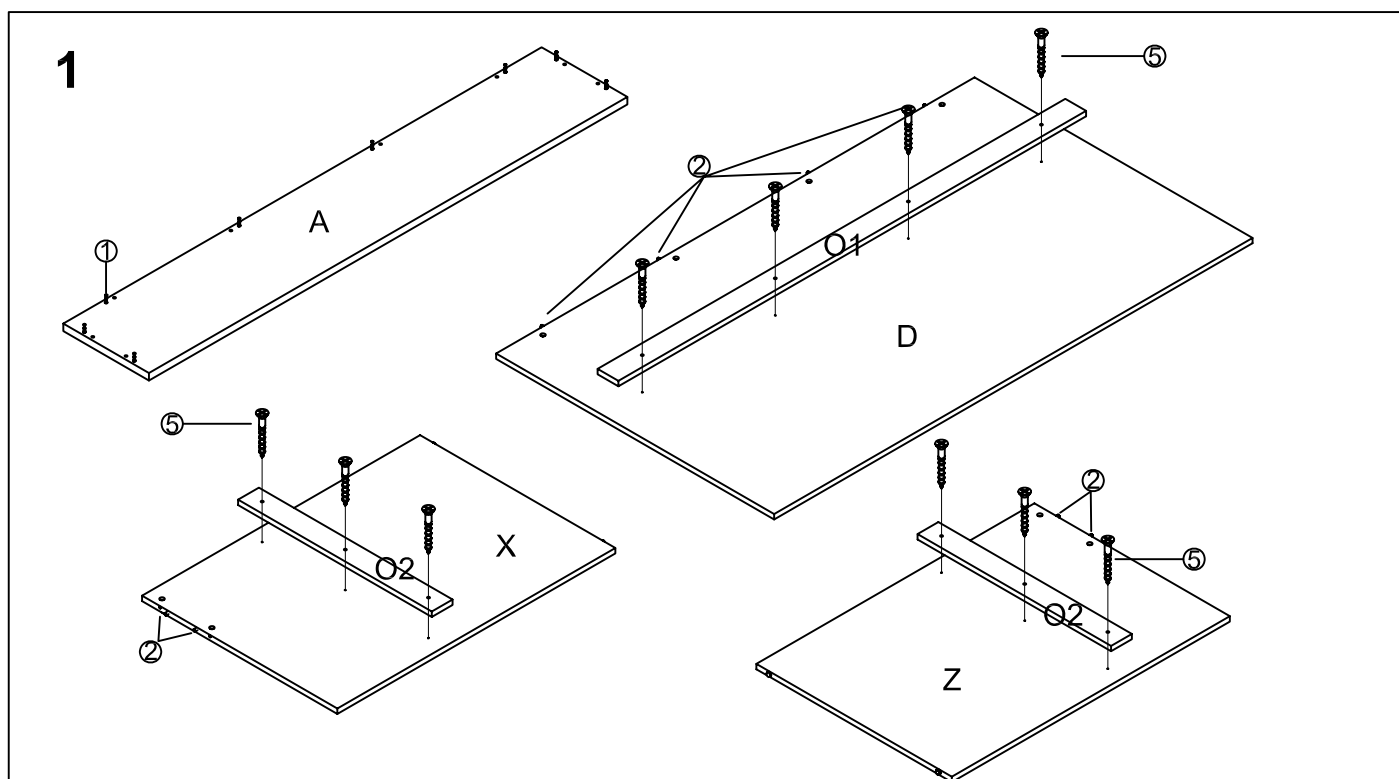

Preparation for Top panel A Side panel X/Z, back panels D, Batten O1, O2.

1. Fix cams on panel Y into cam bolts ① on panel D and tighten in a clockwise direction as illustrated above.
2. Joining panel D and side panel O1 with ⑤ and tighten in a clockwise direction as illustrated above.
3. Joining panel X, Z and side panel O2 with ⑤ and tighten in a clockwise direction as illustrated above.


2

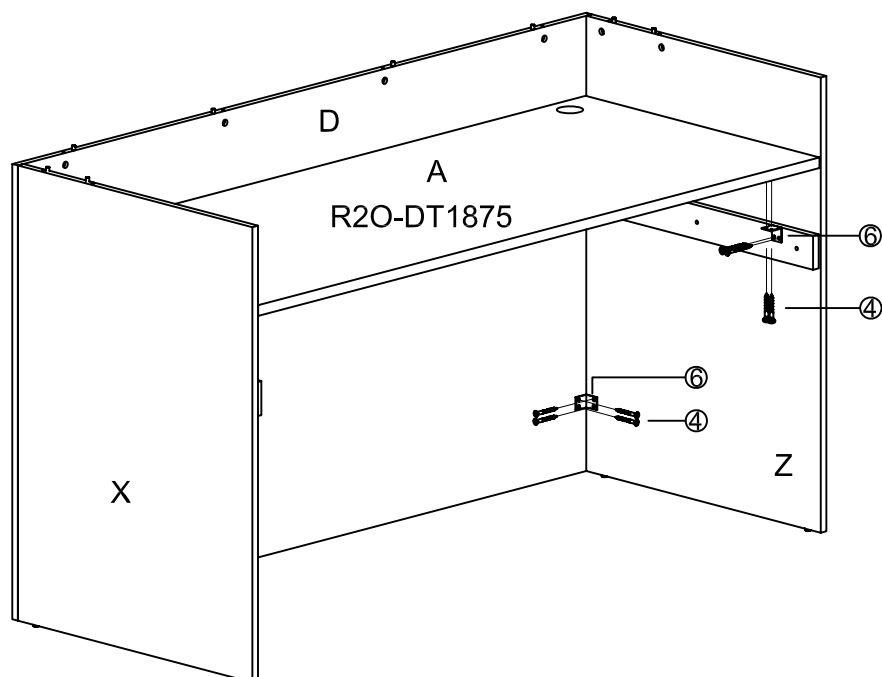

Desk top panel A assembly.

1. Joining panel D and side panel X,Z with (4) (6) and tighten in a clockwise direction as illustrated above.
2. Joining panel A and side panel O1,O2 with (4) (6) and tighten in a clockwise direction as illustrated above.

3

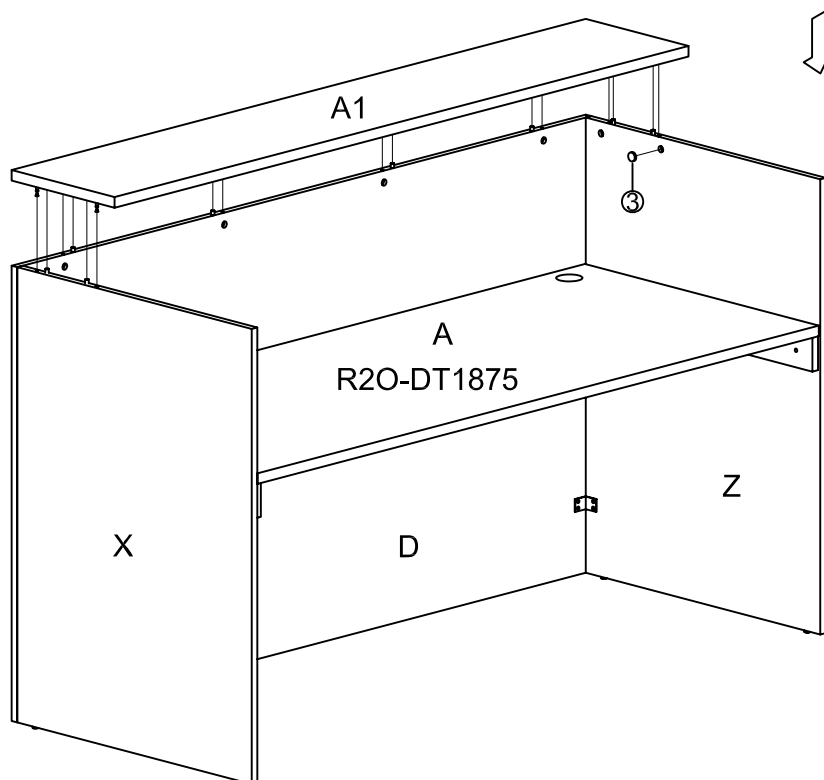


Desk top panel A1 assembly.






1. Insert cam bolts (1) on panel A1 into cams on panels Z/X and D and tighten in a clockwise direction as illustrated above.

ASSEMBLY INSTRUCTIONS


Return for Reception

R20-FFR & R20-RT96

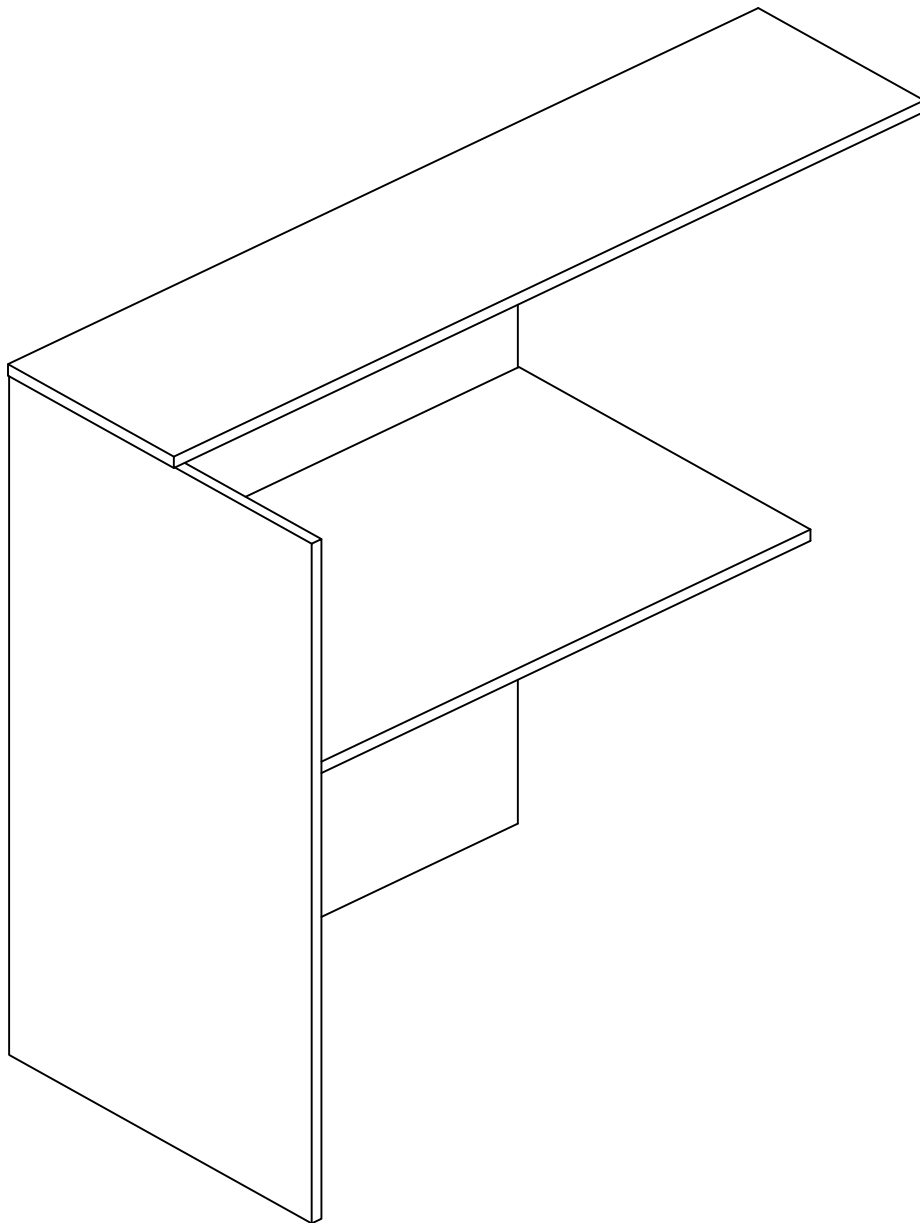

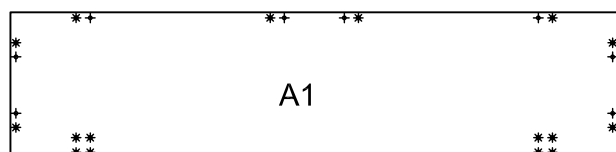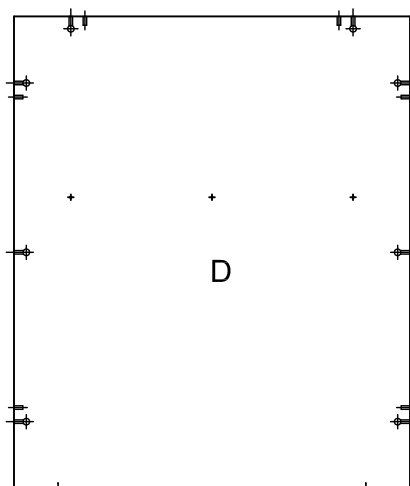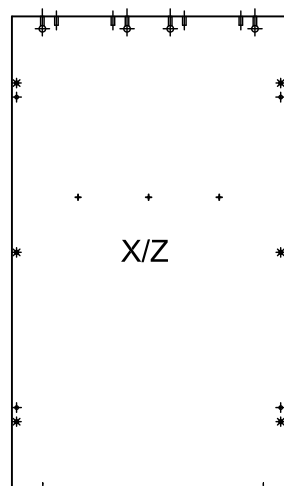


pin  ① 7PCS	Dowel  ② 6PCS	Cam Cover  ③ 12PCS	Screw  ④ 20PCS	Screw  ⑤ 6PCS	Bracket  ⑥ 5PCS
--	--	---	---	--	--

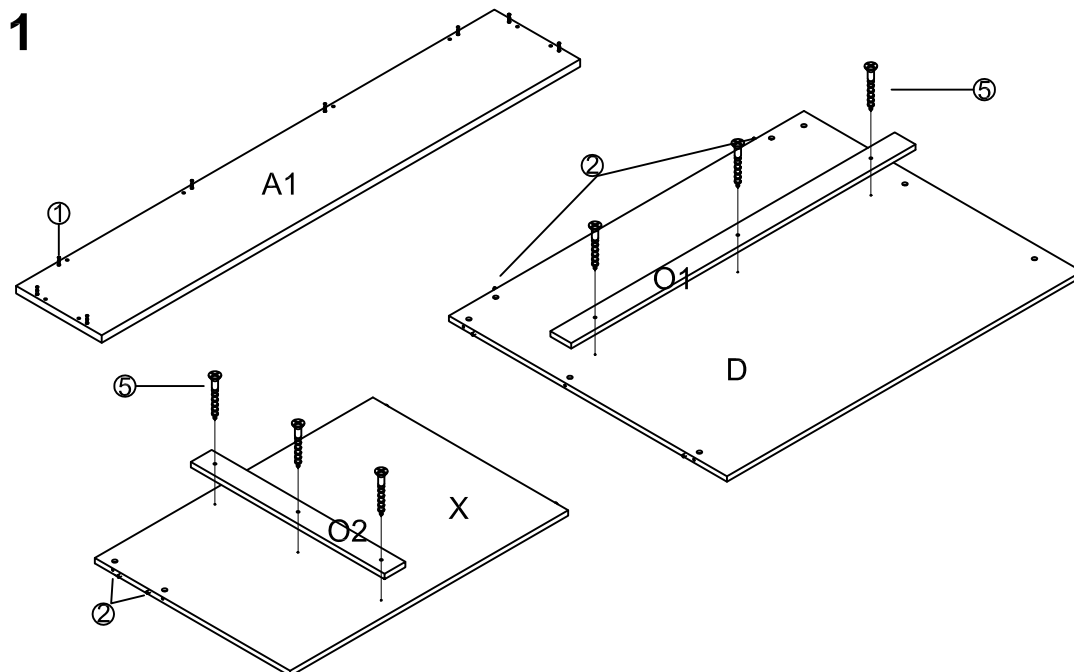

Preparation for Top panel A Side panel X/Z, back panels D, Batten O1, O2.

1. Fix cams on panel Y into cam bolts ① on panel D and tighten in a clockwise direction as illustrated above.
2. Joining panel D and side panel O1 with ⑤ and tighten in a clockwise direction as illustrated above.
3. Joining panel X, Z and side panel O2 with ⑤ and tighten in a clockwise direction as illustrated above.


2

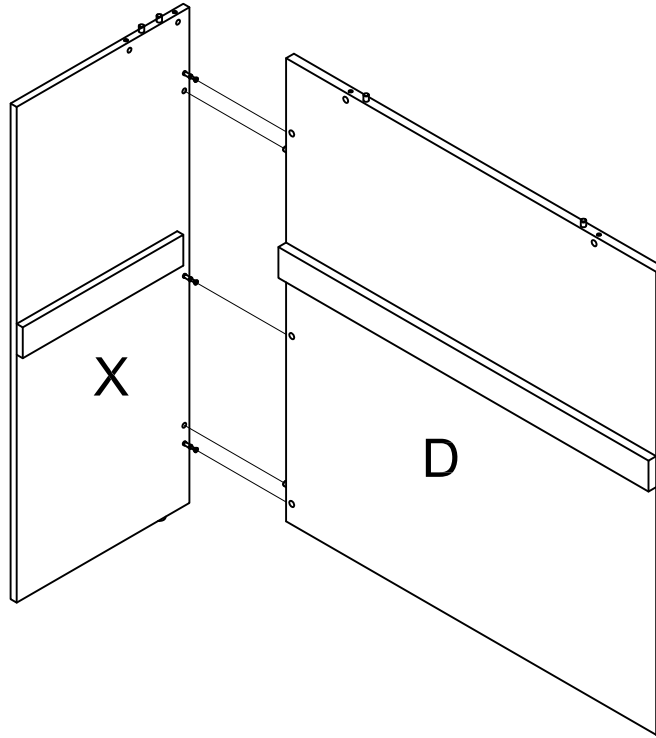

panel Z/X back panels D assembly.

- 1.Insert cam bolts ① on panel X and Z into cams on panels D and tighten in a clockwise direction as illustrated above.


3

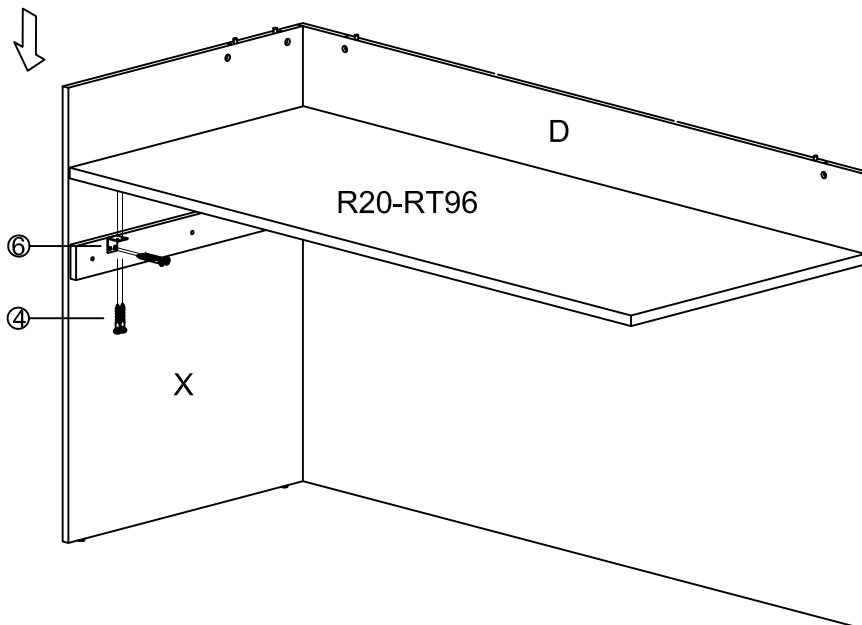

Desk top panel A assembly.

- 1.Joining panel D and side panel X/Z with ④⑥ and tighten in a clockwise direction as illustrated above.
- 2.Joining panel A and side panel O1,O2 with ④ and tighten in a clockwise direction as illustrated above.

2

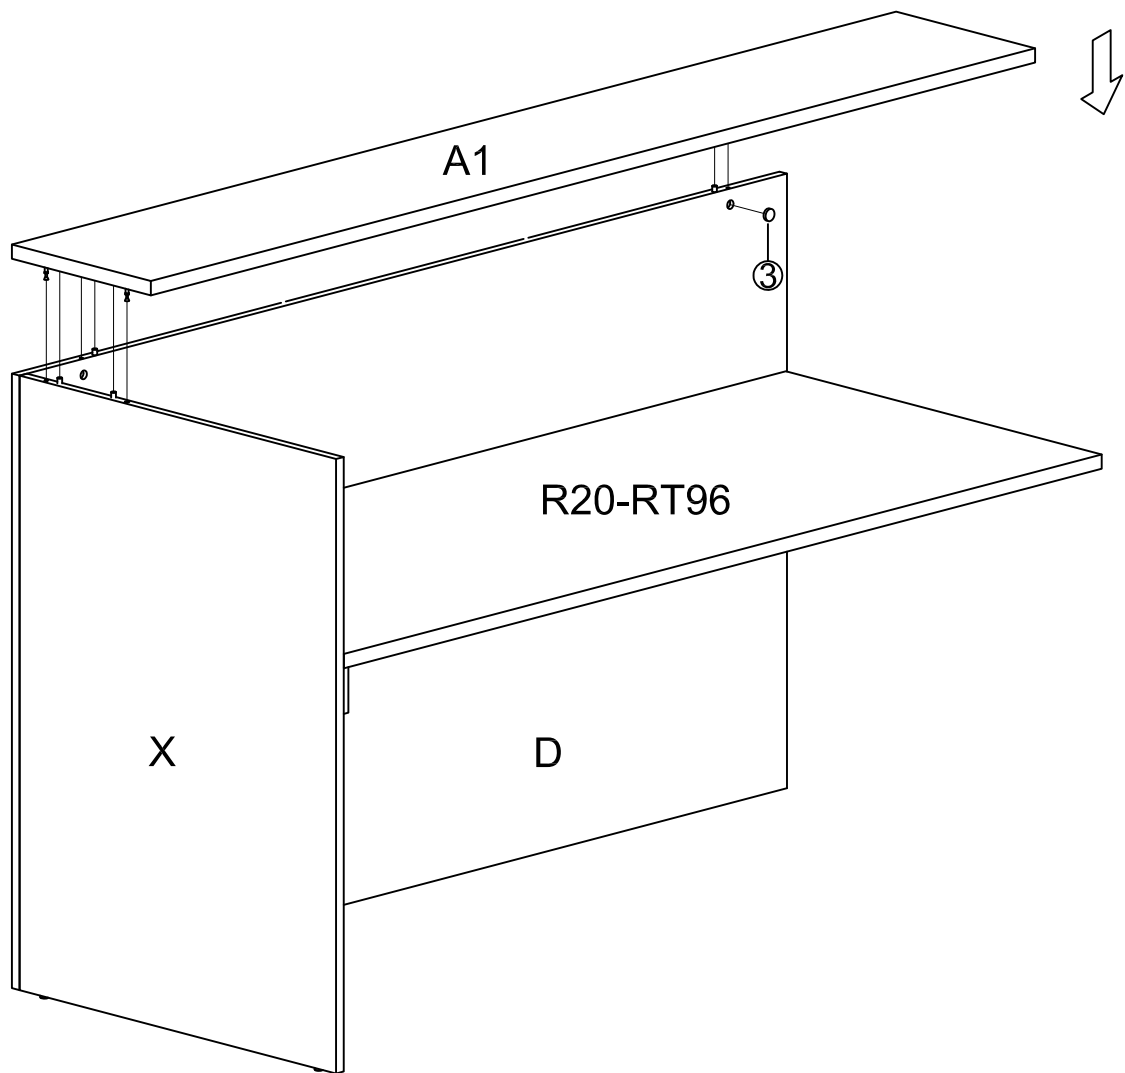

Desk top panel A1 assembly.

1. Insert cam bolts ① on panel A1 into cams on panels Z/X and D and tighten in a clockwise direction as illustrated above.