READY2GO

ASSEMBLY INSTRUCTIONS

R2S-TEH/TEM

(1)

(2)

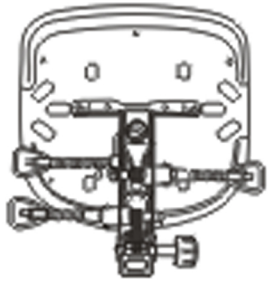

(3) A

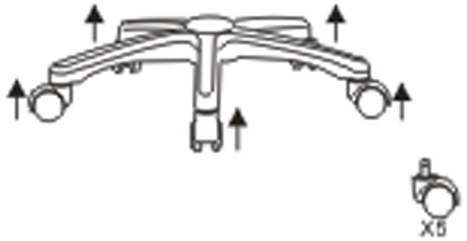

(4)

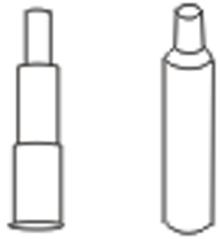

B

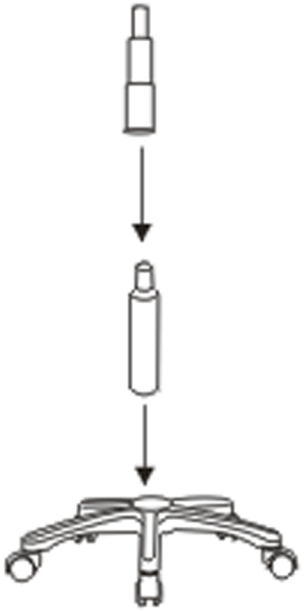

C

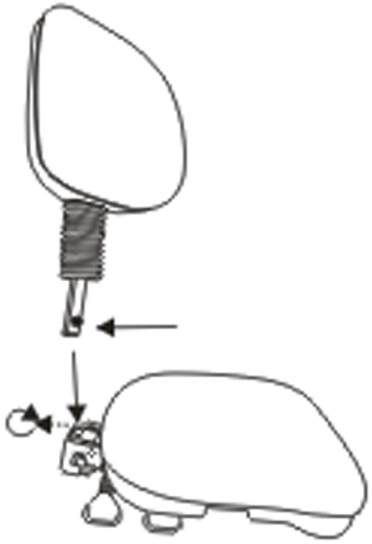

Fasten knob after insert (1) into (2) deeply
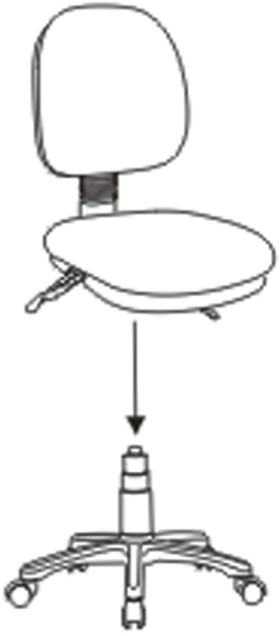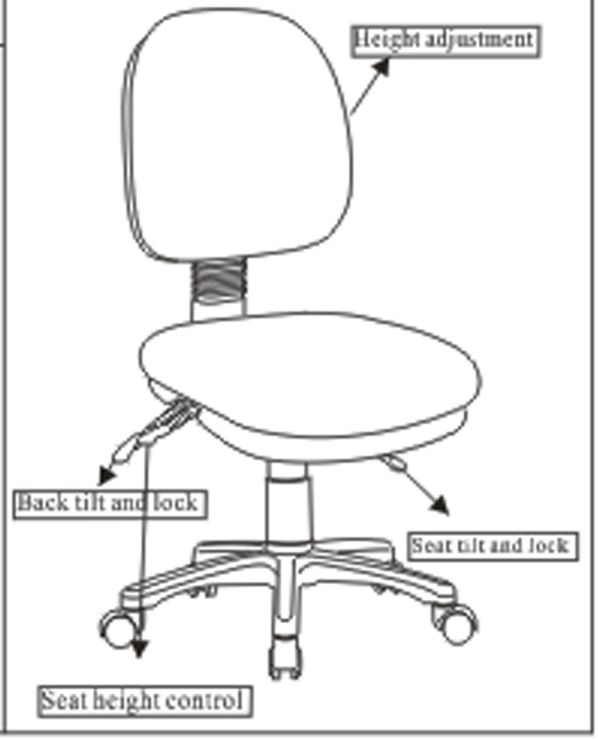
D